BRIGMTON

BTPC-800-QC

TABLET PC 8”-QUAD CORE-WIFI-BLUETOOTH-A 4.2

Manual de Instrucciones

INTRODUCCIÓN

Por favor, lea y conserve todas las instrucciones de funcionamiento antes de utilizar la unidad.
- Evite golpes o caídas de la unidad.
- No utilice objetos de metal para tocar el dispositivo.
- Por favor, realice copia de seguridad de sus datos periódicamente.
- No desmonte el dispositivo. No use líquidos para limpiar la superficie.
- No desconecte la unidad mientras se está formateando o cargando o mientras se encuentre cargando información.
- No utilice el dispositivo en lugares extremadamente fríos o cálidos, polvorientos o húmedos.
- Las especificaciones están sujetas a cambios y mejoras sin previo aviso.

CONTROLES

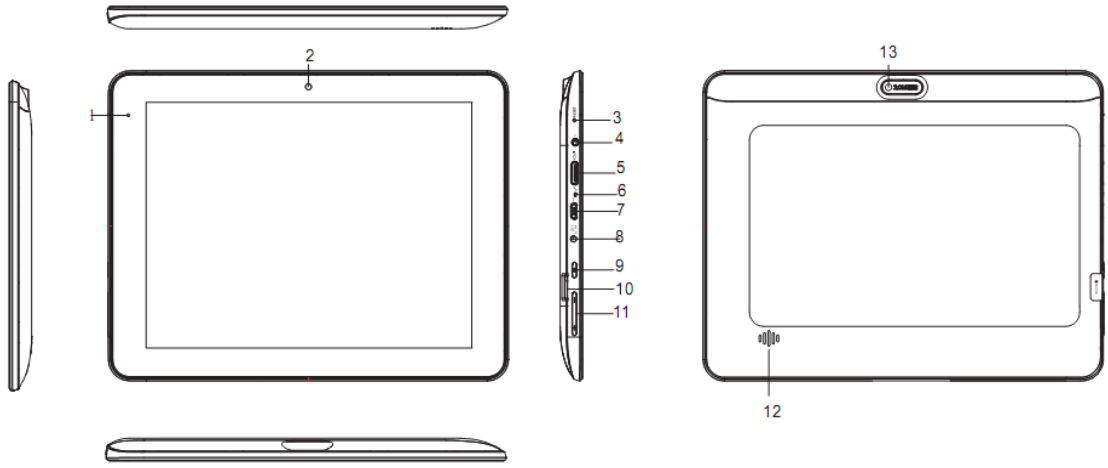

1. Indicador LED
2. Cámara frontal
3. Reset
4. Entrada de auriculares
5. Salida HDMI
6. Micrófono
7. Entrada Micro USB
8. Entrada de alimentación
9. ON/OFF
10. Entrada micro SD
11. Control de volumen
12. Altavoz
13. Cámara trasera

FUNCIONAMIENTO BÁSICO

ENCENDIDO / APAGADO

Para encender el dispositivo, mantenga pulsado el botón de encendido durante 5

segundos. Mostrará el logotipo de inicio en pantalla.
Para apagarlo, mantenga pulsado el botón de encendido durante 5 segundos.
Modo de espera: Cuando el dispositivo se encuentre encendido, pulse brevemente el botón encendido para pasar al modo de espera, la pantalla se pagará, pero la unidad permanecerá encendida. Pulse de nuevo el botón de encendido para volver a encender la pantalla.

CARGA DE BATERÍA
Cuando la batería se agote o muestre el icono en rojo, conecte la unidad al cargador suministrado y este a la toma de corriente.

CONFIGURACIÓN
Haga clic en "Configuración" en el menú principal para entrar en la interfaz de configuración. Haga clic en los elementos de ajuste correspondientes para ajustarlos:

FECHA Y HORA
Haga clic en "Fecha y hora" en la interfaz de configuración para ajustar la fecha y la hora. Usted puede configurar la fecha, la zona horaria, la hora, el formato de hora y formato de fecha, etc.

BRILLO
Haga clic en "Pantalla" y a continuación en "Brillo" para ajustar el brillo de la pantalla.

TIEMPO DE ESPERA DE LA PANTALLA
Ajuste el tiempo en que la pantalla permanecerá encendida antes de pasar a modo de espera. Seleccione "Ver" en la interfaz de configuración. Haga clic en "Apagar después de" y ajuste el tiempo deseado.
Nota: El ajuste del tiempo de espera de la pantalla no está disponible durante la reproducción de video.

CONEXIÓN WI-FI
Haz clic en "Configuración", seleccione Wi-Fi para activar el modo Wi-Fi y aparecerán las redes disponibles. Haga clic en el nombre de la red. Si la red necesaria no aparece en la lista siga los pasos para añadir red. Una vez seleccionada la red, deberá introducir el nombre de usuario y contraseña si las redes están cifradas.

INSTALAR, DESINSTALAR Y EJECUTAR APLICACIONES

INSTALAR
Hay muchas formas de instalar aplicaciones bajo Android, como a través de USB, por programa de terceros, etc.

Haga clic en el "ApkInstaller" en la interfaz principal para entrar en la interfaz de

“instalar y administrar”. Seleccione el archivo APK que desee e introduzca la interfaz de instalación de la aplicación. Haga clic en “Instalar” para instalar la aplicación automáticamente. Tras de la instalación, se le pedirá “Abrir” y “Finalizar”. Haga clic en “Abrir” para abrir la aplicación. Haga clic en "Finalizar" para salir.

DESINSTALAR
Seleccione “Configuración/Aplicaciones/Administrar aplicaciones” para seleccionar las aplicaciones instaladas y a continuación desinstalar la deseada.

CONEXIÓN A INTERNET

Una vez conectado a la red WIFI, abra el navegador y escriba la dirección web deseada.

Haga clic en el icono para ver el historial de exploración. Haga clic en la página web que desea abrir.

REPRODUCCIÓN DE AUDIO Y VÍDEO

AUDIO
Haga clic en música en el menú principal para entrar en la interfaz de reproducción de audio. En ella se enumeran los archivos de audio que se encuentran en el dispositivo, haga clic para reproducir. Podrá reproducir / pausar / aumentar el volumen / disminuir el volumen / FF / REW, etc.

VÍDEO
Haga clic en la "Galería " en el menú principal para entrar en la interfaz de reproducción de vídeo. En ella se enumeran los archivos de vídeo en el dispositivo. Puede hacer clic en el nombre del archivo para reproducirlo. Además puede seleccionar las siguientes opciones: reproducir / pausa / aumento de volumen de volumen / disminución de volumen / saltar al archivo siguiente / saltar al archivo anterior, etc.

VISUALIZACIÓN DE IMÁGENES

Haga clic en " Galería " en el menú principal para entrar en la lista de imágenes. Seleccione y haga clic en la carpeta que desea reproducir y se mostrarán los archivos. Haga clic en la miniatura de la imagen para poder verla.
Toque la pantalla para desplegar los iconos de operación mientras se visualiza la imagen, puede hacer zoom in / zoom out / saltar a la imagen siguiente / saltar a la imagen anterior / girar / eliminar la imagen, etc.

CÁMARA

FOTOS
Haga clic en “Cámara” en la interfaz principal. Compruebe que el selector de cámara

se encuentra en foto .

Pulse el icono para tomar una foto.

Pulse para seleccionar diversas opciones tamaño, calidad, efectos de color, etc.

Seleccione para balance de blancos

VÍDEO

Seleccione vídeo con el cursor

Comience a grabar con y seleccione diversas opciones de ajustes con .

CONECTAR COMO DISPOSITIVO EXTERNO

CONEXIÓN A PC
Conecte el dispositivo con el PC a través del cable USB. En el PC aparece dos nuevos símbolos de discos externos, uno de ellos es la tarjeta micro SD o su espacio y el otro es la memoria integrada.

OTG
La unidad soporta dispositivos OTG externos.

SOLUCIÓN DE PROBLEMAS

1. ¿Qué pasa si el dispositivo tiene un funcionamiento anormal?
1). Reinicie el dispositivo.
2). Cargar la batería.

2. ¿Duración de la batería?
El tiempo de uso de la batería puede depender de muchos factores como por ejemplo la temperatura. Si la temperatura es demasiado alta o demasiado baja, el tiempo de uso de la batería puede verse afectado. Se recomienda no usar en muy altas o bajas temperaturas.

"Las especificaciones pueden cambiar sin previo aviso"
IMPORTADO
I.R.P., S.L.
AVDA. SANTA CLARA DE CUBA 5
SEVILLA, SPAIN

BRIGMTON

DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN60950-1:2006/A11:2009/A1:2010
EN 62311: 2088
EN 301 489-1 V1.9.2:2011-09
EN 301 489-17 V2.1.1:2009-05
EN 300 328 V1.7.1: 2006-10
ETSI EN 301 489-1 V1.9.2(2011-09)
ETSI EN 301 489-17 V2.1.1(2009-05)

Descripción del aparato:

Modelo BRIGMTON **BTPC-800-QC**
Dispositivo de conexión a internet

Importador: I.R.P., S.L.
Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.

BRIGMTON

BTPC-800-QC

TABLET PC 8”-QUAD CORE-WIFI-BLUETOOTH-A 4.2

Instruction Manual

PREFACE

Thank you for buying this MID. Please read and retain all the operating instructions before operating the unit.

- Avoid the unit being dropped. Avoid the display been shake seriously, or the display will be damaged or unusual.
- Do not use metal object to touch the device to prevent it from short circuit.

Please backup your data in case your important data is lost, especially before you upgrade the firmware.

- Do not disassemble. Do not wipe the surface of the unit by alcohol, thinner or benzene.
- Do not disconnect the unit while it is formatting or uploading/downloading, or the procedures may lead to errors.
- Avoid water or foreign objects enter the unit.
- Do not use the unit in places that are extremely hot, cold, dusty, or humid.

Specifications are subject to change and improvement without notice.

INTRODUCTION OF COVER

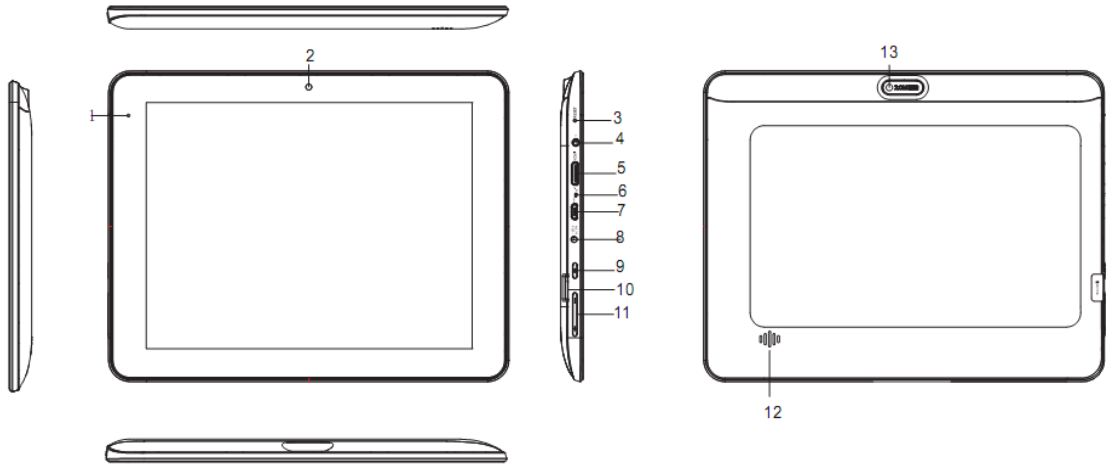

1. DC LED
2. Front Camera
3. Reset
4. Earphone Jack
5. HDMI interface
6. MIC
7. Micro USB interface
8. DC charger interface
9. Power on/off
10. TF card interface
11. Volume +,Volume –
12. Loudspeaker
13. Back Camera

OPERATION INSTRUCTION

BASIC OPERATION
POWER ON/POWER OFF
Press and hold the power switch for 5 seconds; the unit displays the start-up logo and enters the working mode.
Press and hold the power switch for 5 seconds to turn the unit off.
While the device is at working status, press the power switch, it enters the sleeping mode, and the screen will be off then. Press the power switch again, it shift to the normal mode. You may use this function when you don't' use the device temporary to save power.

CHARGING: When the device prompts low battery, please charge it by provided charger.

MAIN MENU: Click the icon in the main interface, the main menu is appeared. It including the system setting, music playback, video playback, web browser and other applications you installed in the main menu.

SETTINGS: Click "Settings" in the main interface to enter the setting interface. Click the corresponding setting items to operate.

DATE AND TIME SETTING: Click "Date & time" in the setting interface to set the date and time. You may set the date, time zone, time, time format and date format etc. in the menu.

BRIGHTNESS: Select "Display" in the setting interface. Click "Brightness" to enter, and slide the bar to adjust the brightness.

SCREEN TIMEOUT: Adjust the delay before the screen automatically turns off.
Select "Display" in the setting interface. Click "Sleep" to enter, and click the time you want. Note: The setting of screen timeout is unavailable while playing video.

WI-FI CONNECTION

Click "Settings" in the main interface. Click Wi-Fi to turn on the WIFI, it lists the open network it searched. Click the name of the network; it pops up the setting window. You may connect it to WIFI according to the prompts. You need to input the user name and password if networks are encrypted.

INSTALL, UNINSTALL AND RUN APPLICATIONS

Install: There are many ways to install applications under Android, such as via USB, by third party program. We introduce installation by Apps Installer here.
Click the "APKInstaller" in the main interface to enter the "install and manage" interface.
Select the APK file you want and enter the application installation interface. Click

"Install" to install the application automatically. After installation, it prompts "Open" and "Finish". Click "Open" to open the application. Click "Finish" to exit.

Uninstall: You may use the corresponding third party software management tool or the installed application management software of the device to install applications. Select "Setting/Applications/Manage applications" to select the installed applications and check the attribute of it or uninstall it.

CONNECT TO INTERNET

After connecting with WIFI, open the browser and input the web address, you can browse the web then.

Click the icon to enter the bookmark to view the browse history. Click the web page you want to open it.

AUDIO AND VIDEO PLAYBACK

AUDIO PLAYBACK
Click the "MUSIC" in the main menu to enter the audio playback interface. It lists the audio files in the device, and you may click the file name to play it. in the audio playing interface, click the icons to play/pause/ increase volume/ decrease volume/ FF/ REW….

VIDEO PLAYBACK
Click the "Gallery" in the main menu to enter the video playback interface. It lists the video files in the device, and you may click the file name to play it. in the video playing interface, touch the screen to pop-up the operation icons and click the icons to play/pause/ increase volume/ decrease volume/ skip to next file/skip to previous file….

PICTURE VIEWING
Click "Gallery" in the main menu to enter the picture folder list. Select and click the folder you want to enter, it displays them. Click the thumbnail of the picture to view it. Touch the screen to pop-up the operation icons while viewing the picture, you may zoom in/zoom out/ skip to next picture/skip to previous picture/ rotate/ delete the picture…

CAMERA

If the cursor is at position, the device is at Camera mode.

Click to take picture.

Click to set the scene mode, Picture size, Picture quality, and colour effect.

Click to set white balance.

DV

If the cursor is at position, the device is at DV mode.

Click to take picture.

Click to set the colour effect or restore to default settings.

CONNECT WITH EXTERNAL DEVICE

CONNECT WITH PC
Connect the device with the PC via the USB cable. The PC appears two new disk symbols after connected successfully. One is the TF card, and the other is the built-in flash.

USE OF OTG
It supports the movable device with FAT32 format, such as U disk and MP3. Connect the movable device to the MID.

TROUBLESHOOTING

What if the device is abnormal during operation?
1) Reboot the device to see if it works OK.
2) Charge the device by the charger to activate the battery. Make sure it has power before you operate it.
3) It is suggested to upgrade the OS of the device by professional.

Why the standby time is so short sometimes?
Answer: the use time of the battery is all depend on the temperature and use instance. If the temperature is too high or too low, the use time of the battery might be effected. It is suggest using the device in normal temperature. The using time is also affected by increased volume and frequently operation.

"Features can change without notice"

Imported: I.R.P., S.L.
Avda. Santa Clara de Cuba 5
41007 Sevilla
Spain

BRIGMTON

DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN60950-1:2006/A11:2009/A1:2010
EN 62311: 2088
EN 301 489-1 V1.9.2:2011-09
EN 301 489-17 V2.1.1:2009-05
EN 300 328 V1.7.1: 2006-10
ETSI EN 301 489-1 V1.9.2(2011-09)
ETSI EN 301 489-17 V2.1.1(2009-05)

Description of apparatus:

BRIGMTON Model **BTPC-800-QC**
Movile Internet Device

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.